



UPGRADING FIRMWARE ON A HIKVISION NVR

Step 1: Open a Browser (Firefox, Chrome, etc) and type in the IP address of the Hikvision NVR in the address bar then press enter. This will bring you to the NVR login page.

Step 2: Log in to the NVR with your username and password. Now click the “Configuration” tab.

Step 3: Next click the “Maintenance” option. Now you will see an area to browse for a firmware file. Click the “Browse” button and locate the correct firmware file for your NVR.

Once loaded click the “Upgrade” button to start the upgrade. The page will gray out and you will see a percentage of progress for the upgrade. Once the upgrade is done the NVR will reboot.

To find the correct firmware file for your Hikvision NVR visit us at <http://www.nellyssecurity.com>

Type in the model number of the NVR in the search box and press enter.

Click on the link to the NVR then find the firmware under the Downloads Tab.

